


MOUNTING GUIDELINES FOR THE EDESK

A disassembling instruction video is available [here](#).


1. Gather all parts for desk including tabletop.

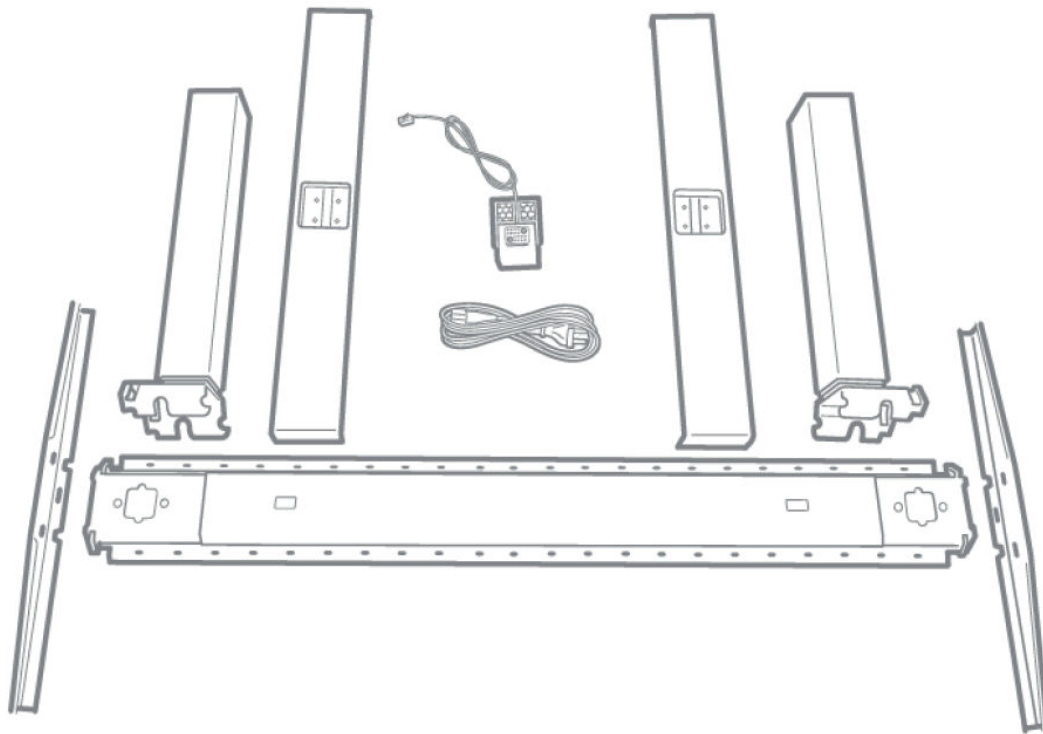

2. Turn tabletop upside down.

3. Fix beam length.

3.1. Extend beam to required length (width 1150 to 1750 mm), adjustable in 50 mm steps).

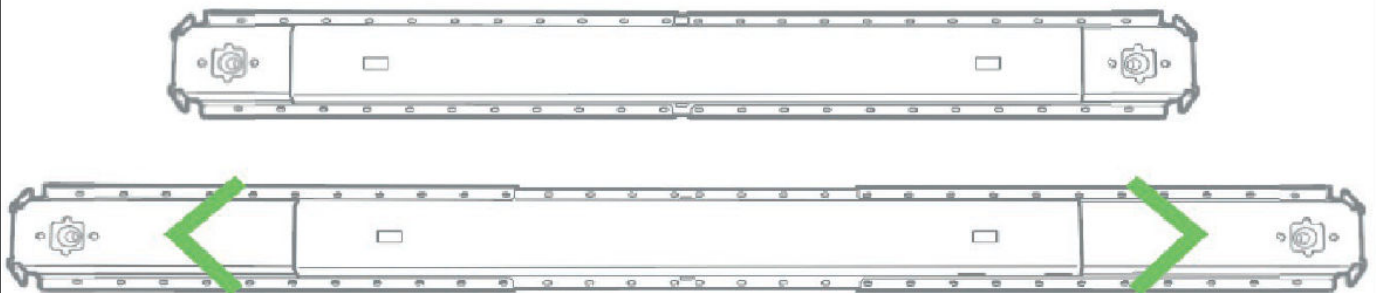

The beam must **not** be pulled completely apart in order not to pull the drive shaft apart.




Minimum adjustment in the connection end is 100 mm (to keep power and RJ45 sockets accessible), otherwise adjustable in 50 mm steps.

4. Mount cantilevers.

4.1. Place a cantilever slightly tilted at end of beam.

4.2. Press cantilever into place until a click is heard and pawls lock cantilever in correct position.

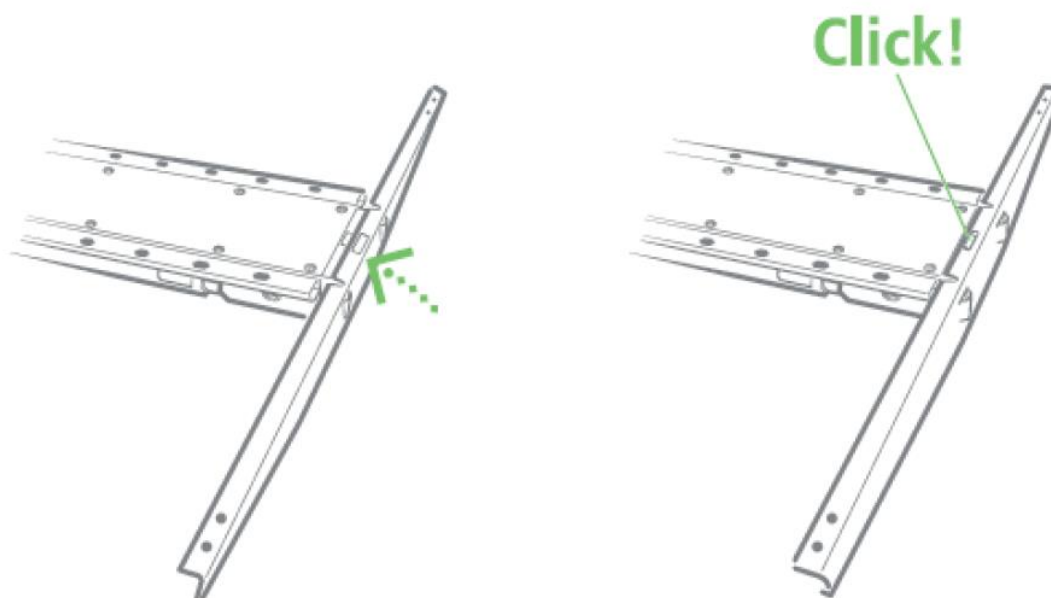

4.3. Mount cantilever in other end of beam.



Check that the cantilever is placed correctly and cannot be twisted off the DF2 beam.



Do not extract the beam using the cantilevers as handles.

5. Place assembled DF2 frame in correct position.

Use tape measure to ensure central placement of DF2 frame.

6. Fasten DF2 frame to tabletop using 20 mounting screws as follows:


6.a. 8 screws at ends of beam.

Use one of these to fix mains cable to beam with cable clamp creating a cable relief, see step 13.

Connect power cable.


6.b. 4 screws at extension points.

6.c. 8 screws in cantilevers.

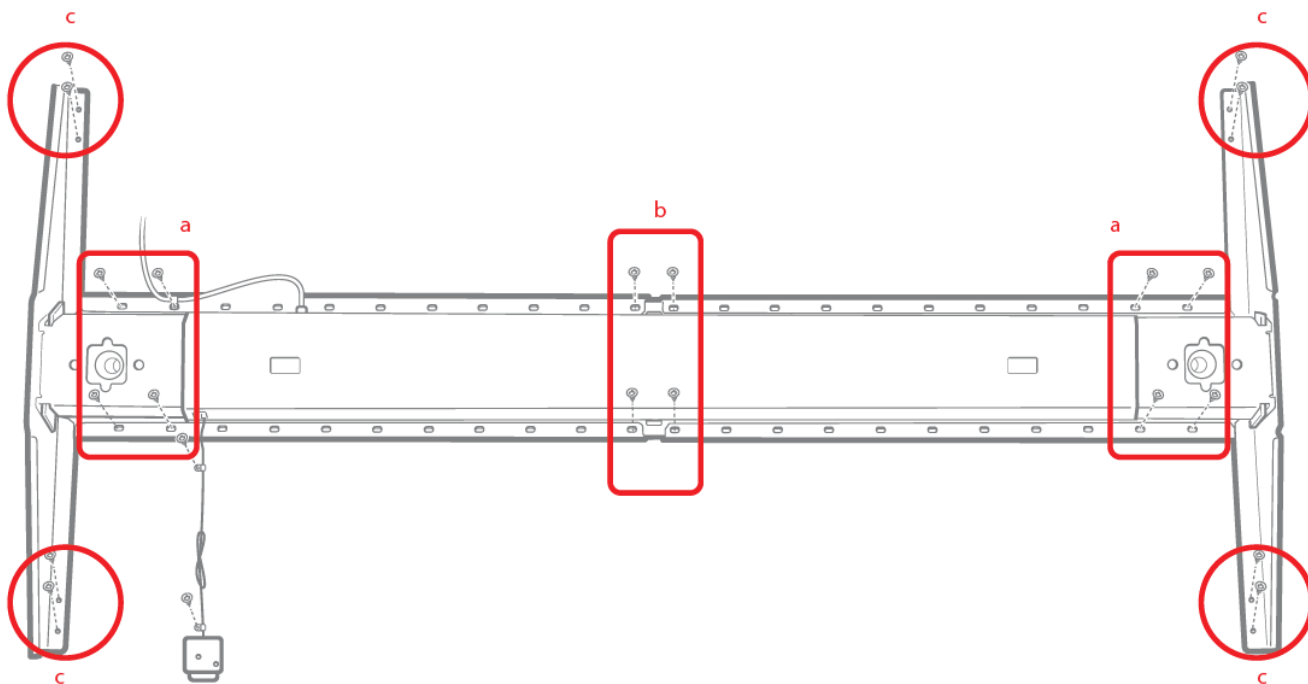


7. Mount columns.

7.1. Ensure columns are completely retracted.

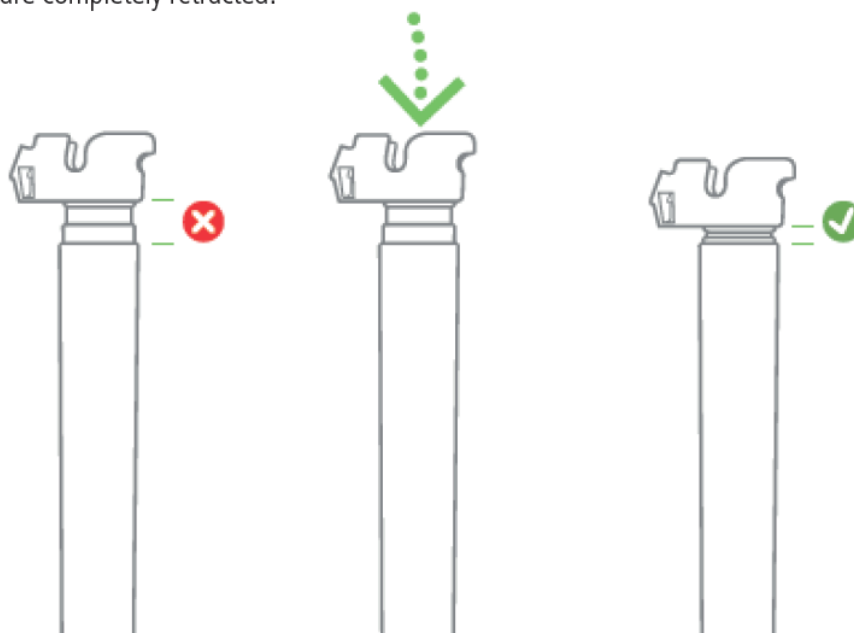


If the column extracts when turned upside down, press by hand to completely retracted position.


7.2. Tilt columns and place correctly on beam using guiding notches.

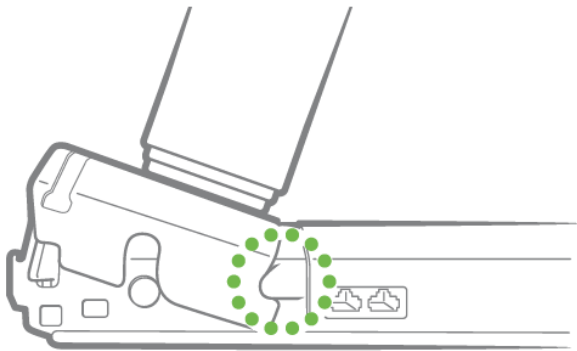

7.3. Fix column to beam by pressing down until a "click" is heard and **both** pawls lock column in correct position.

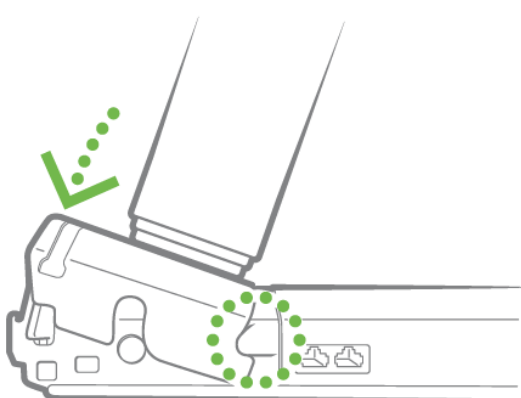

Click!

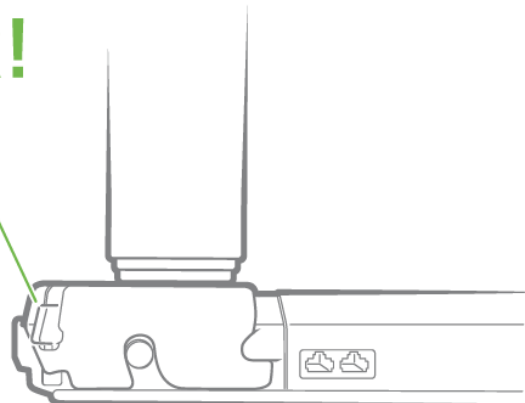


Check that both pawls are visible after mounting of the columns. Otherwise, remove column and try again (see Disassembly, steps 4 and 5).

8. Mount desk panel



Ensure that only one desk panel at the time is connected to the DF2.


8.1 Connect desk panel in one of RJ45 sockets.

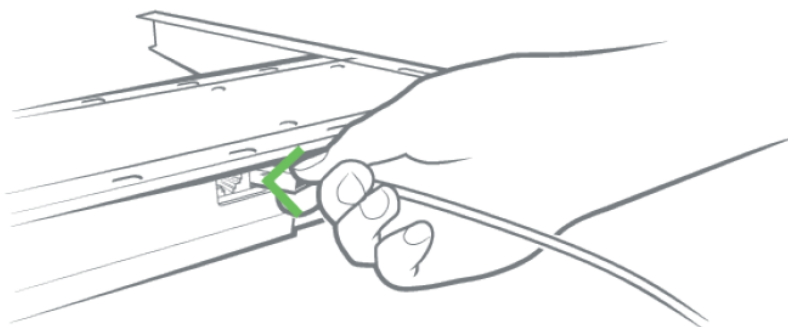


8.2. Fasten desk panel to tabletop using mounting screws.

8.3. Fasten cable to tabletop using two screws and two cable clamps.

9. Connect power cable.

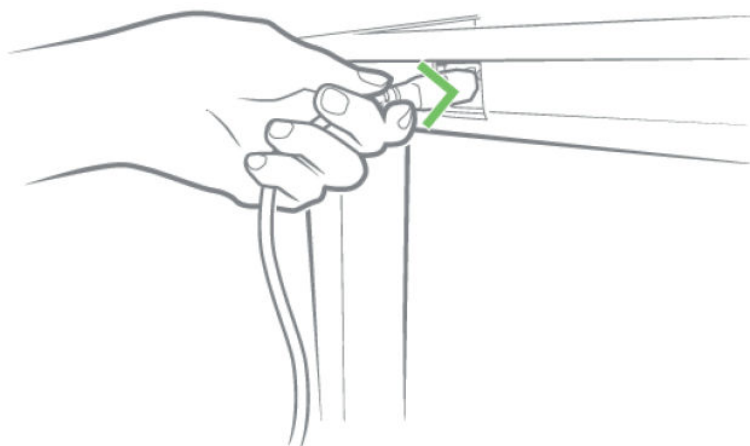


Ensure to make a cable relief using the cable clamp when fastening the cable to the tabletop.

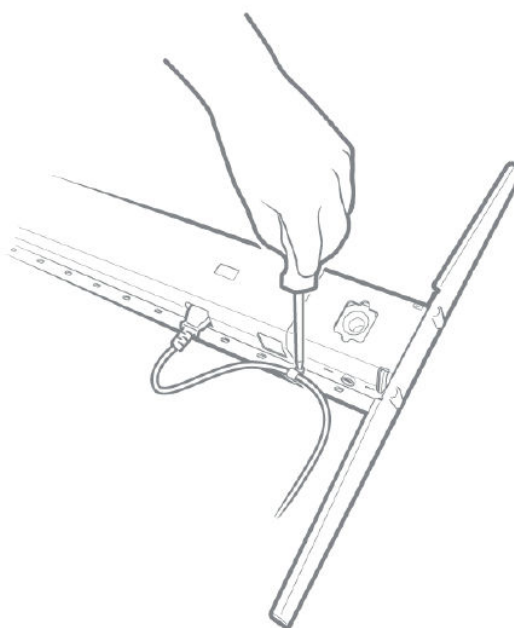

10. Mount feet

10.1 Mount feet on columns using eight M6 mounting screws.

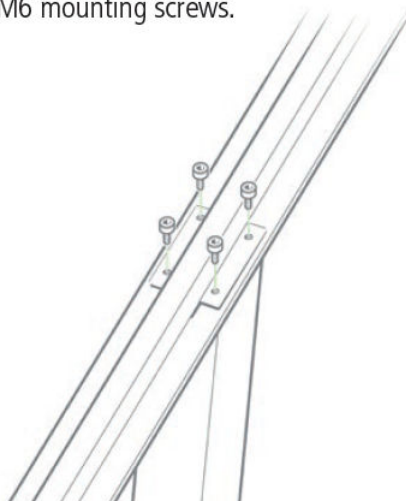


The DF2L06 columns are supplied with four M6 and two M8 threaded holes. For mounting the feet, always use four M6 or two M8 bolts with the following specifications:


Quality: Min. grade 8.8

Length: Min. 10 mm (plus foot thickness); max. 16 mm (plus foot thickness)

10.2. Fasten bolts thoroughly (torque: max. 10 Nm).

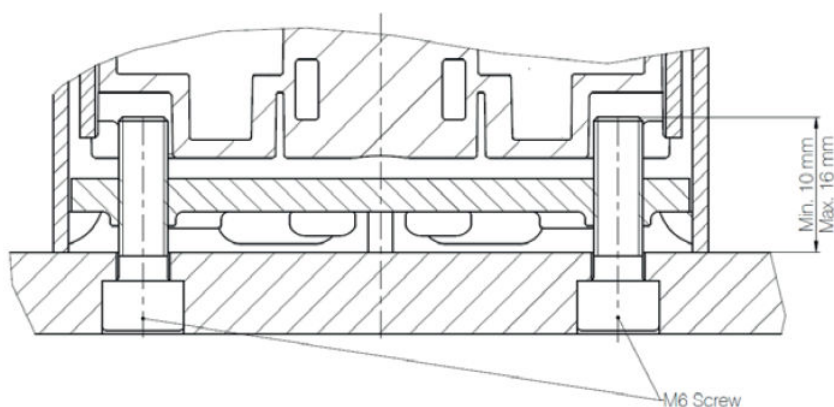

10.3. Mount adjustment screws.

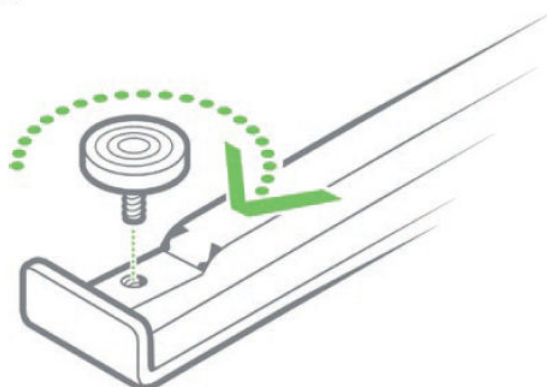

11. Turn table around.

12. Connect to mains supply.

Your desk is now ready for use.

DISASSEMBLY

A disassembling instruction video is available [here](#).


For disassembling the DF2, use a disassembly tool (ordering code 1023W1241).




Figure 6 Disassembly tool

Disassembling DF2


1. Drive desk to its minimum height so columns are completely retracted.
2. Disconnect from mains supply.
3. Turn table upside down.
4. Disconnect, unscrew and remove desk panel.
5. Unscrew and remove feet.
6. Place disassembly tool on beam to make pawl release column.

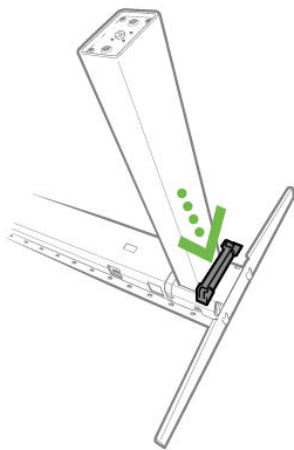

7. At the same time press disassembly tool down and tilt column to remove from beam.


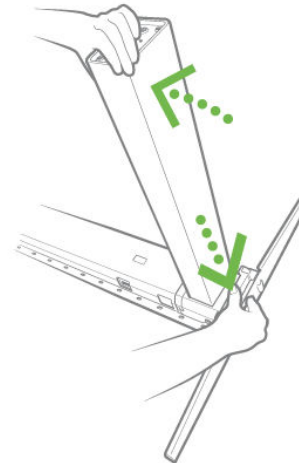


8. Unscrew DF2 beam from tabletop.
9. Turn DF2 beam upside down.
10. Press screwdriver down on pawl. Slightly tilt cantilever to remove it.

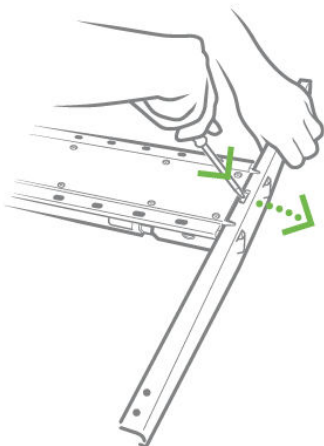

11. Disassemble rest of system.

[illegible]

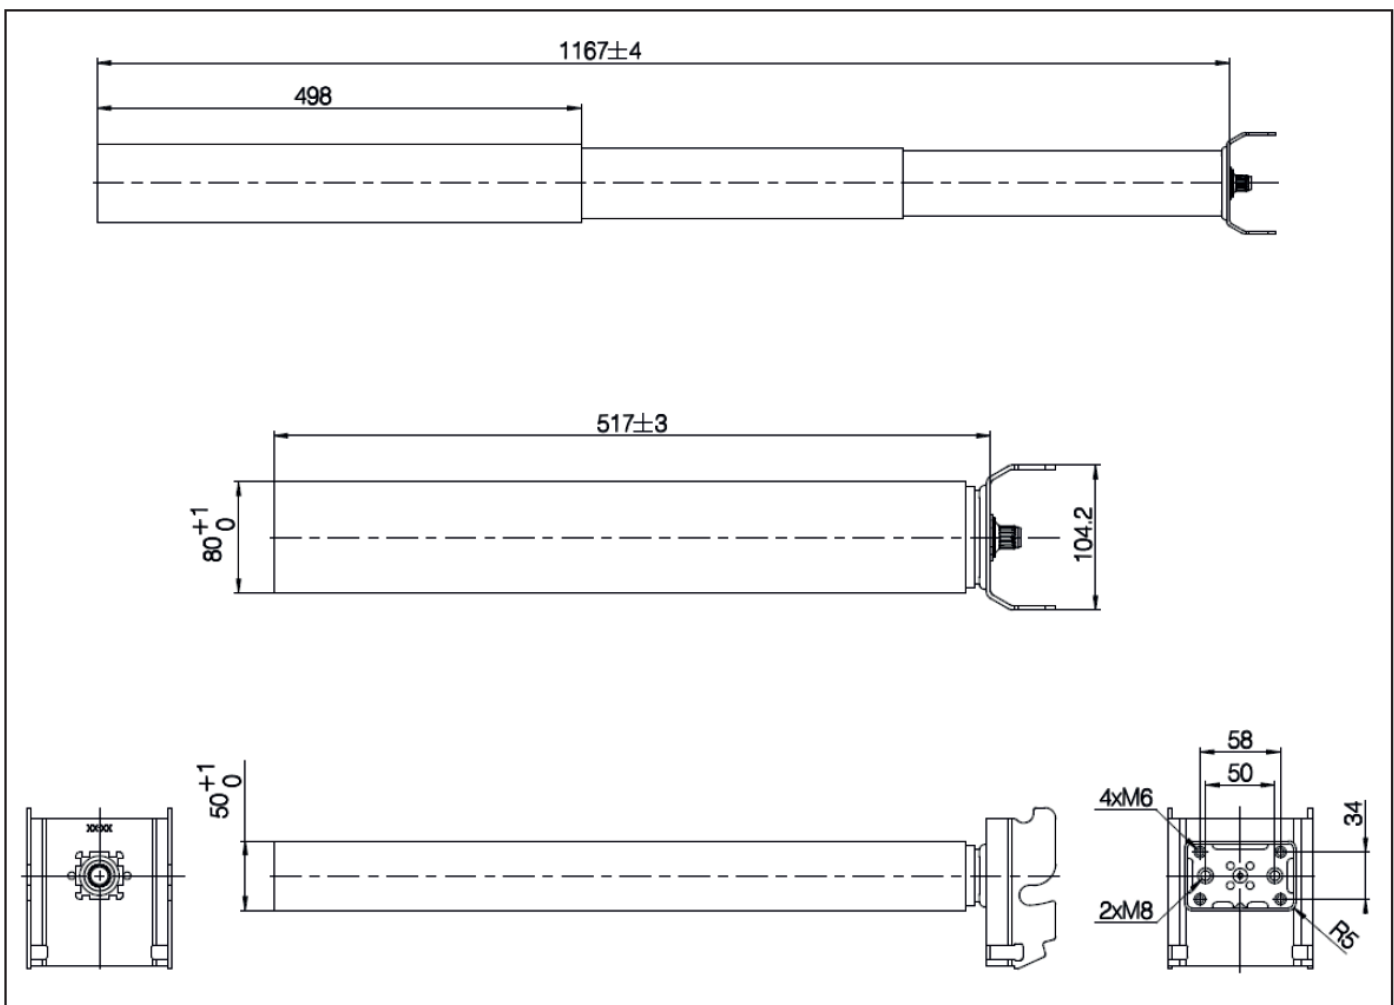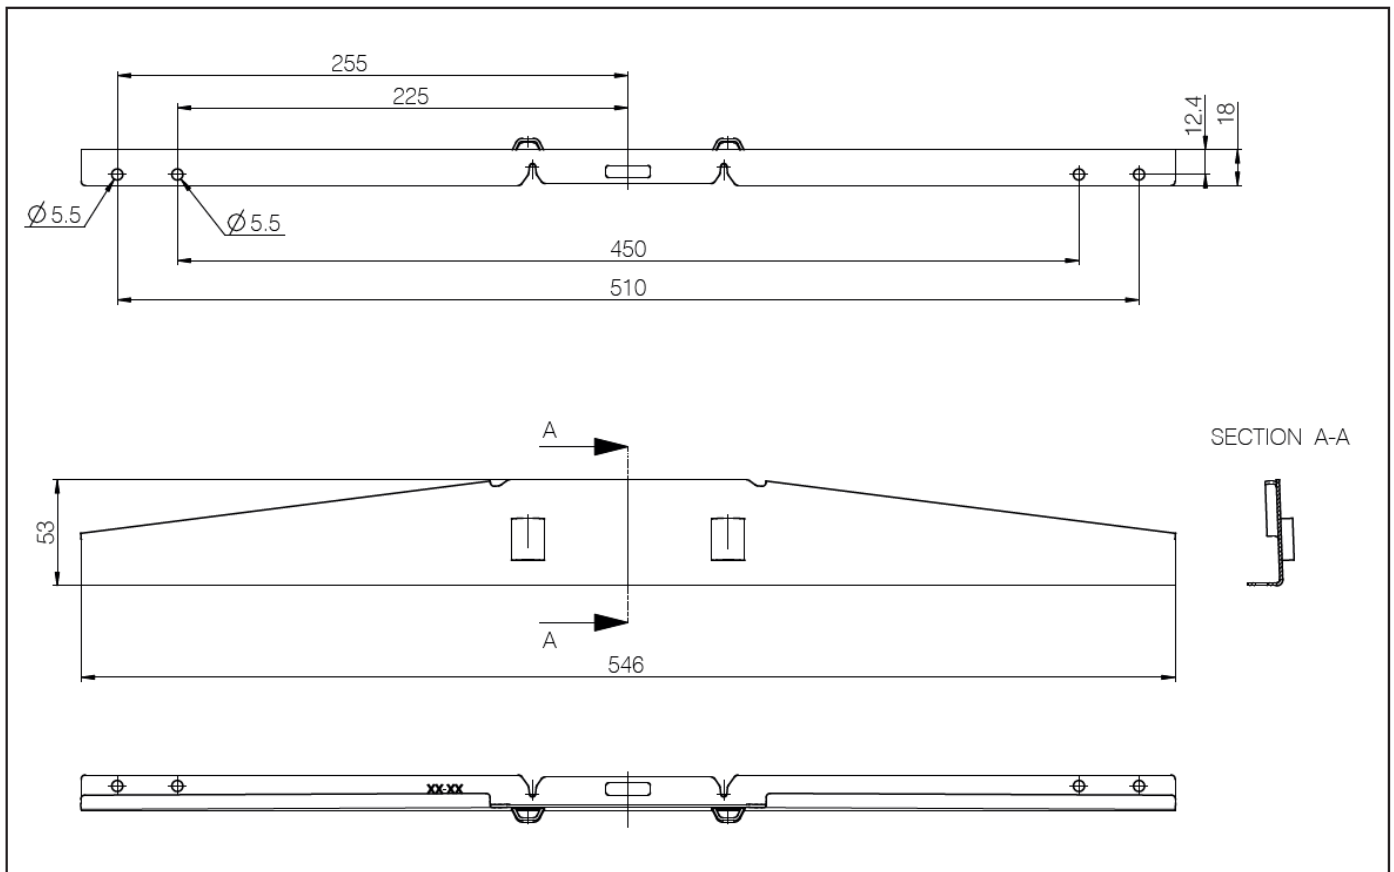

For additional information or questions contact Ergomotion at (03)9579 1454 or sales@ergomotion.com.au